


PS-3, PS-80, PS-100 Adjustment

How to adjust the length

As you can see the following diagram is the remote control of the screen. Each button is marked with character. This will remind you when we talk about them later.

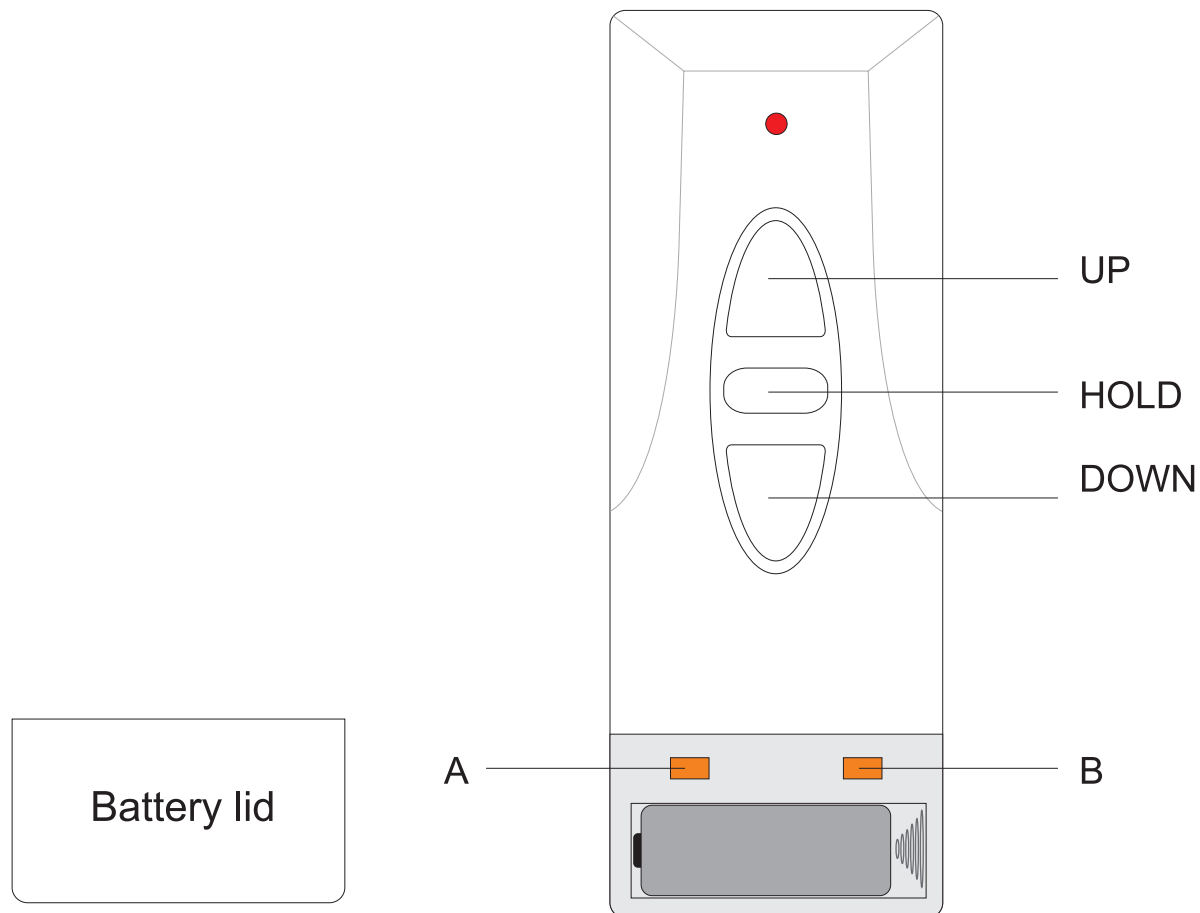

Ok, here we go, just a few simple steps can adjust the screen to ideal length.

For adjusting the bottom position:

1. Press and hold button B for at least 6 seconds to enter the setting mode (you can hear some "BEEP" from the screen).
2. Press button DOWN to release the screen.
Press button A to stop when the screen is on proper position.
3. Press button DOWN to adjust the accurate length.
4. Press button HOLD to confirm position.

For adjusting the top position:

1. Press button UP to fold up the screen.
2. Press button A to stop when the screen is on proper position.
3. Press button UP to adjust the accurate length.